


SUGGESTED WIRING FOR 20V + DYANE HRW. (DISCONNECT BATTERY BEFORE STARTING WORK !)
 THE SUPPLIERS OF THIS KIT ASSUME THE INSTALLER POSSESSES SUFFICIENT COMMON SENSE AND EXPERTISE.
 IF EITHER IS LACKING, WE ACCEPT NO RESPONSIBILITY AND RECOMMEND YOU CONSULT AN AUTO-ELECTRICIAN.

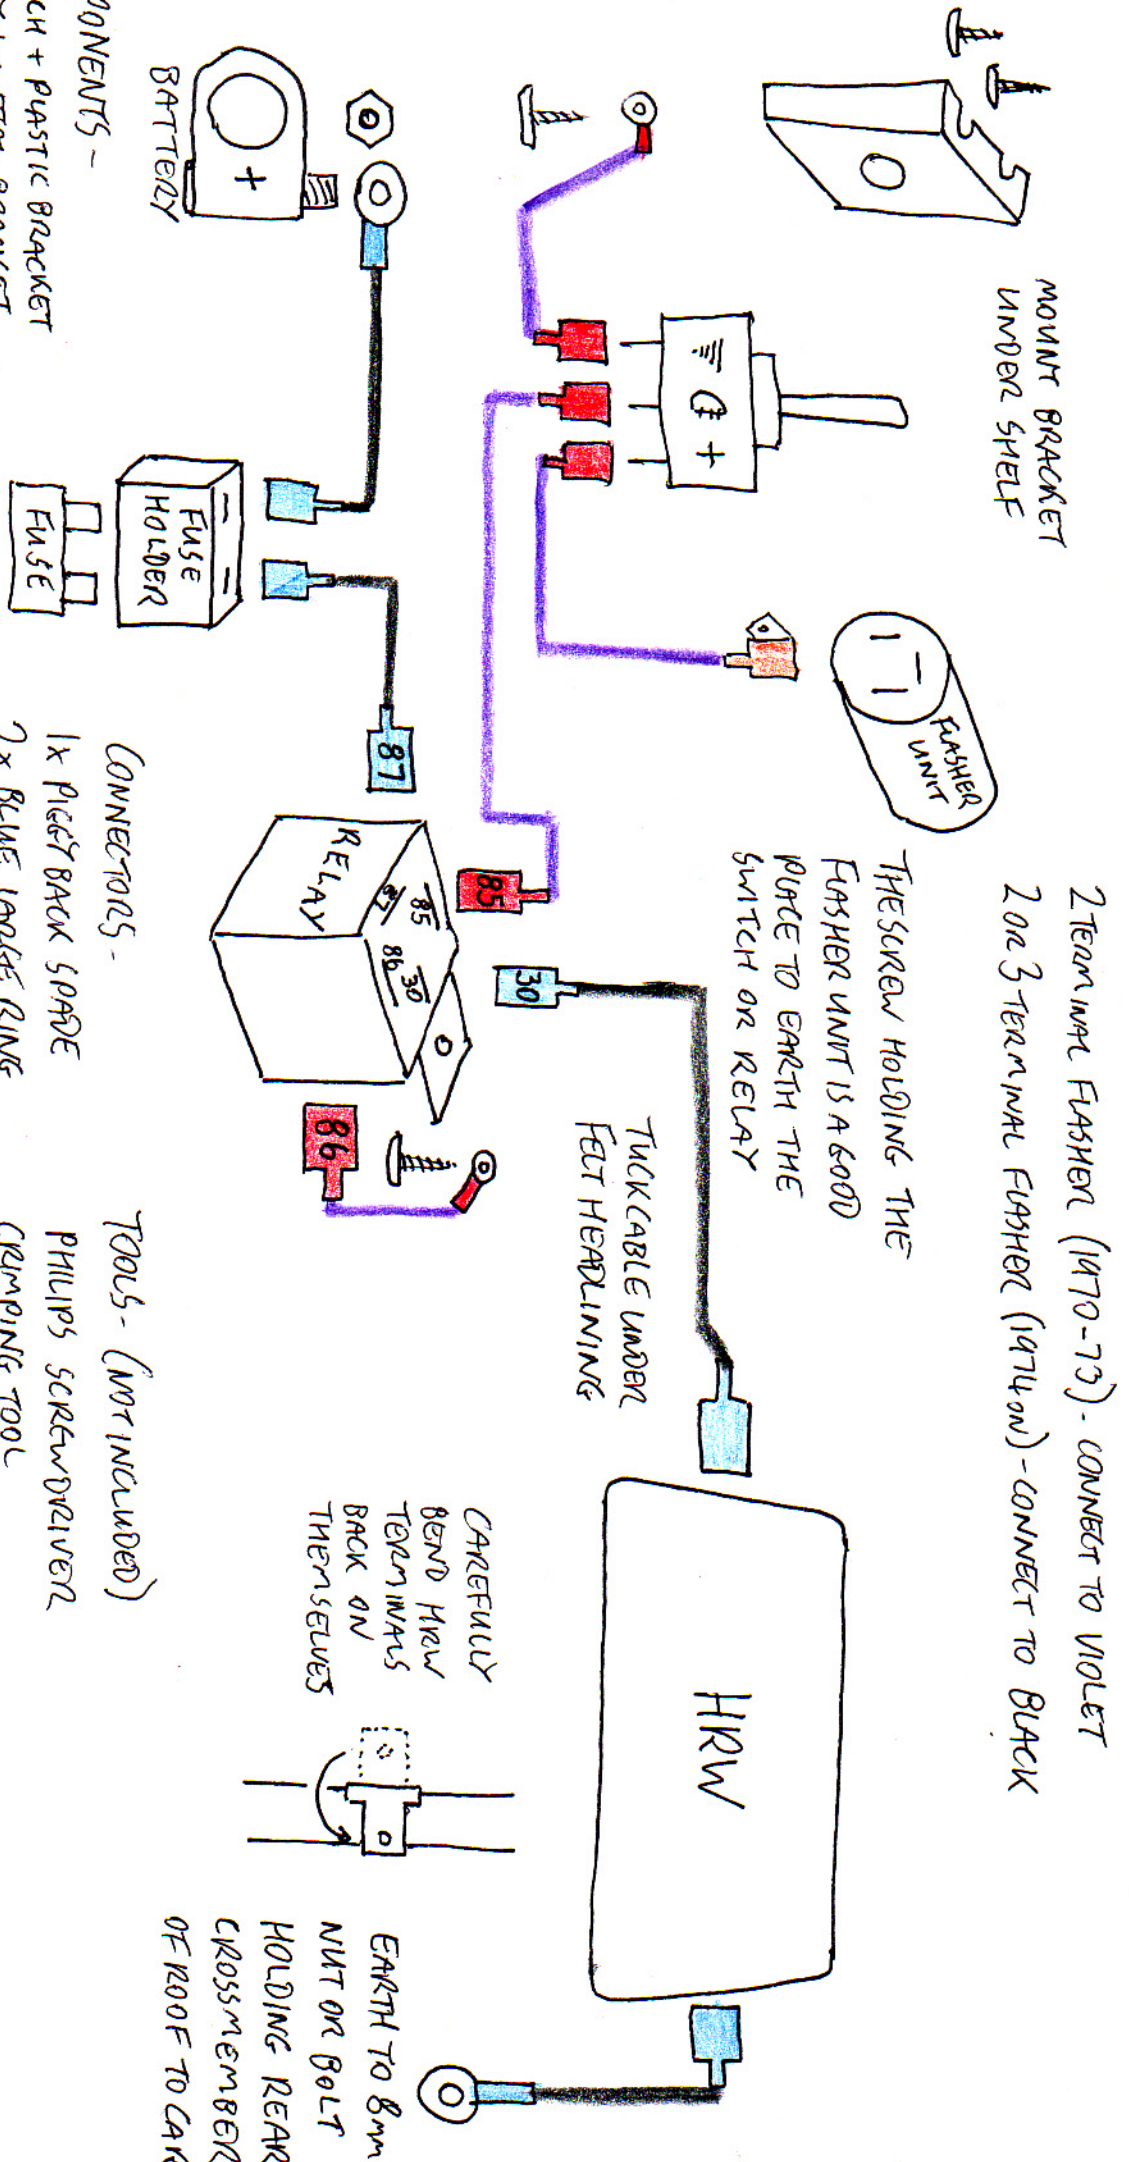

MOUNT BRACKET UNDER SHELF

FLASHER UNIT

THE SCREW HOLDING THE FLASHER UNIT IS A GOOD PLACE TO EARTH THE SWITCH OR RELAY

TUCK CABLE UNDER FELT HEADLINING

CAREFULLY BEND NEW TERMINALS BACK ON THEMSELVES

EARTH TO 8mm NUT OR BOLT HOLDING REAR CROSS MEMBER OF ROOF TO CAR

COMPONENTS -

- Switch + plastic bracket
- Relay + metal bracket
- Fuse + fuse holder

CABLE -

- 4m HIGH AMP CABLE (THICK)
- 2m LOW AMP CABLE (THINNER)

CONNECTORS -

- 1x PILOT BACK SPADE
- 2x BLUE WAGGE RING
- 6x BLUE SPADE
- 5x RED SPADE
- 2x RED SMALL RING
- 4x SCREW

TOOLS - (NOT INCLUDED)

- PHILIPS SCREWDRIVER
- CLAMPING TOOL
- WIRE CUTTER/STRIPPER
- SMALL PUNCH/DRILL (FOR PILOT HOLES TO MOUNT SCREENS)
- 8MM AND 10mm SPANNERS