





## Instructions for Fitting Dyane Weather Strip



1. Open the front of the roof and undo the side press studs to take the tension off the roof fabric.
2. Remove the back of the roof from the tailgate hinge cross-member by undoing the two press studs on the outside and three small screws on the inside of the cross-member. Lever the back of the roof off carefully, taking care not to bend it.
3. Glue the top front edge of the weather strip to the underside of the roof like this (you may find it easier if you remove the roof from the car to do this).

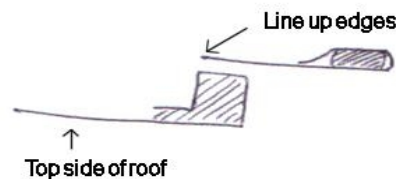

4. Refix the back of the roof to the tailgate hinge cross-member. The weather strip can then be positioned like this.

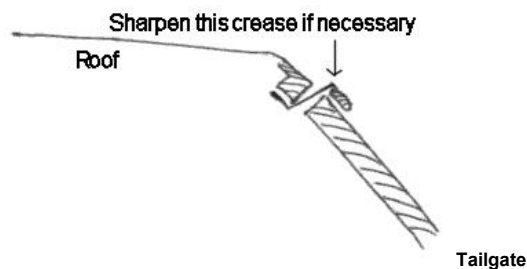

The rain will run off the roof into the gully and down the sides of the car instead of into your boot.

13 Lewis Road, Chichester, West Sussex PO19 7LZ  
Tel: 01243 780132 Fax: 01243 790009  
Email: [info@matts-soft-tops.co.uk](mailto:info@matts-soft-tops.co.uk) Website: [www.matts-soft-tops.co.uk](http://www.matts-soft-tops.co.uk)